

FCC Information and Copyright

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.



**Dichiarazione di conformità
sintetica**

Ai sensi dell'art. 2 comma 3 del D.M.
275 del 30/10/2002

Si dichiara che questo prodotto è
conforme alle normative vigenti e
soddisfa i requisiti essenziali richiesti
dalle direttive

2004/108/CE, 2006/95/CE e
1999/05/CE

quando ad esso applicabili

Short Declaration of conformity

We declare this product is complying
with the laws in force and meeting all
the essential requirements as specified
by the directives

2004/108/CE, 2006/95/CE and
1999/05/CE

whenever these laws may be applied

Table of Contents

Chapter 1: Introduction	1
1.1 Before You Start.....	1
1.2 Package Checklist	1
1.3 Motherboard Features.....	2
1.4 Rear Panel Connectors.....	3
1.5 Motherboard Layout.....	4
Chapter 2: Hardware Installation	5
2.1 Installing Central Processing Unit (CPU)	5
2.2 FAN Headers	7
2.3 Installing System Memory	8
2.4 Connectors and Slots.....	10
Chapter 3: Headers & Jumpers Setup	13
3.1 How to Setup Jumpers.....	13
3.2 Detail Settings	13
Chapter 4: RAID Functions	18
4.1 Operating System	18
4.2 Raid Arrays.....	18
4.3 How RAID Works	18
4.4 Smart Storage Caching	22
Chapter 5: T-Series BIOS & Software.....	23
5.1 T-Series UEFI BIOS	23
5.2 T-Series Software.....	26
Chapter 6: Useful Help	38
6.1 Driver Installation Note.....	38
6.2 Extra Information.....	39
6.3 Troubleshooting	40
Appendix: SPEC In Other Languages	42
German.....	42
French	44
Italian.....	46
Spanish	48
Portuguese	50
Polish.....	52
Russian	54
Arabic.....	56
Japanese	58

CHAPTER 1: INTRODUCTION

1.1 BEFORE YOU START

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.
- The operating temperatures of the computer should be 0 to 45 degrees Celsius.

1.2 PACKAGE CHECKLIST

- ✚ Serial ATA Cable X 4
- ✚ Rear I/O Panel for ATX Case X 1
- ✚ User's Manual X 1
- ✚ Fully Setup Driver CD X 1


Note: The package contents may be different due to area or your motherboard version.

1.3 MOTHERBOARD FEATURES

SPEC		
CPU	Socket 1155 Intel Core i7 / i5 / i3 / Pentium / Celeron processor	Supports Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipset	Intel Z68	
Super I/O	IT8728 Provides the most commonly used legacy Super I/O functionality. Low Pin Count Interface	Environment Control initiatives, Hardware Monitor Controller Fan Speed Controller ITE's "Smart Guardian" function
Main Memory	DDR3 DIMM Slots x 4 Max Memory Capacity 32GB Each DIMM supports 512MB/ 1GB/2GB/4GB/8GB DDR3	Dual Channel Mode DDR3 memory module Supports DDR3 1066/1333/1600(OC) Supports DDR3 1866(OC)/2133(OC)/2200(OC) Registered DIMM and ECC DIMM is not supported
SATA 2 & 3	Integrated Serial ATA Controller	Data transfer rates up to 3.0 Gb/s / 6.0 Gb/s. SATA Version 2.0 / 3.0 specification compliant
LAN	Realtek RTL 8111E	10 / 100 Mb/s / 1Gb/s auto negotiation Half / Full duplex capability
Sound Codec	ALC892	5.1 channels audio out High Definition Audio
USB3.0	ASM1042	Data transfer rates up to 600 MB/s
Slots	PCI slot	x2 Supports PCI expansion card
	PCI-E Gen2 x16 @ x16 slot	x1 Supports PCI-E Gen2 x16 expansion card
	PCI-E Gen2 x16 @ x4 slot	x1 Supports PCI-E Gen2 x4 expansion card
	PCI-E Gen2 x1 slot	x1 Supports PCI-E Gen2 x1 expansion card
On Board Connectors	SATA3 Connector	x2 Each connector supports 1 SATA3 device
	SATA2 Connector	x4 Each connector supports 1 SATA2 device
	Front Panel Connector	x1 Supports front panel facilities
	Front Audio Connector	x1 Supports front panel audio function
	CPU Fan Header	x1 CPU Fan power supply (with Smart Fan function)
	System Fan Header	x2 System Fan Power supply

SPEC			
	Clear CMOS Header	x1	Restore CMOS data to factory default
	USB2.0 Connector	x3	Each connector supports 2 front panel USB2.0 ports
	Consumer IR Connector	x1	Supports infrared function
	Printer Port Connector	x1	Each connector supports 1 Printer port
	Serial Port Connector	x1	Connects to RS-232 Port
	S/PDIF out Connector	x1	Supports digital audio out function
	Power Connector (24pin)	x1	Connects to Power supply
	Power Connector (8pin)	x1	Connects to Power supply
Back Panel I/O	PS/2 Keyboard / Mouse	x1	Connects to PS/2 Keyboard / Mouse
	HDMI Port	x1	Connects to HDMI cable
	VGA Port	x1	Connect to D-SUB monitor
	DVI-D Port	x1	Connect to DVI monitor
	LAN port	x1	Connect to RJ-45 ethernet cable
	USB2.0 Port	x2	Connect to USB2.0 devices
	USB3.0 Port	x2	Connect to USB3.0 devices (by ASM1042) and USB2.0/USB1.X devices (by Z68)
	Audio Jack	x3	Provide Audio-In/Out and Mic. connection
Board Size	230 (W) x 305 (L) mm		
OS Support	Windows XP / Vista / 7		Biostar reserves the right to add or remove support for any OS with or without notice


1.4 REAR PANEL CONNECTORS

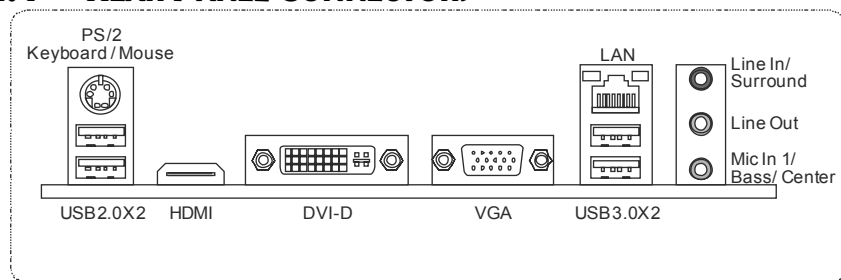

NOTE: Any of 2 HDMI / DVI-D / VGA can provide video signals out-put function.

NOTE: USB3.0 ports are backward compatible with USB2.0/USB1.X devices. USB3.0 is controlled by ASM1042, but, USB2.0/USB1.X is controlled by Z68.


1.5 MOTHERBOARD LAYOUT

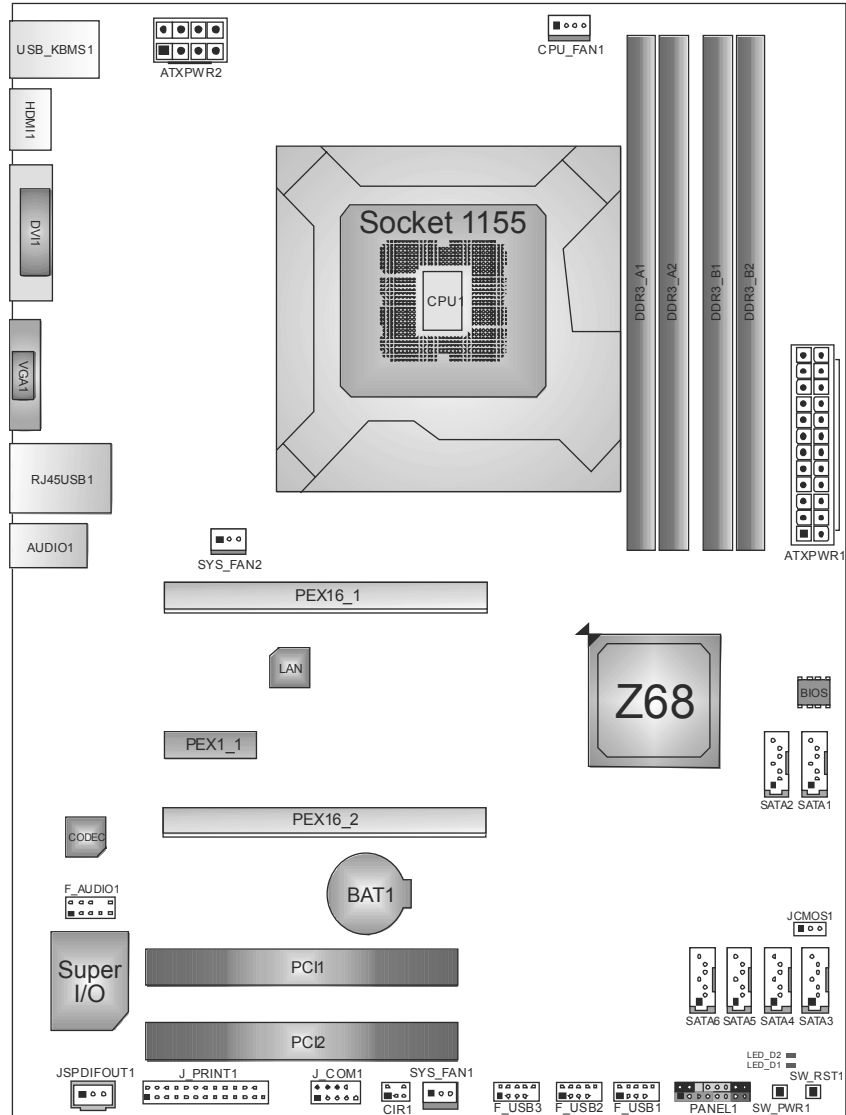

Note: ■ represents the 1st pin.

CHAPTER 2: HARDWARE INSTALLATION


2.1 INSTALLING CENTRAL PROCESSING UNIT (CPU)

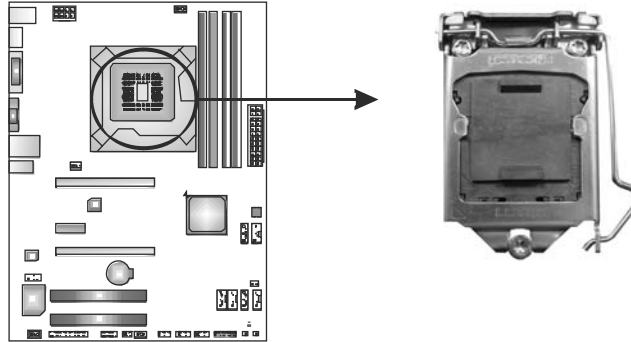


Special Notice:

Remove Pin Cap before installation, and make good preservation for future use. When the CPU is removed, cover the Pin Cap on the empty socket to ensure pin legs won't be damaged.

Step 1: Pull the socket locking lever out from the socket and then raise the lever up.

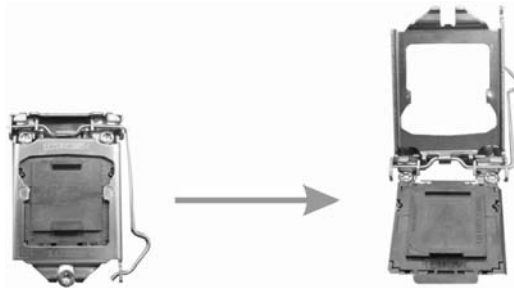


Step 2: Remove the Pin Cap.

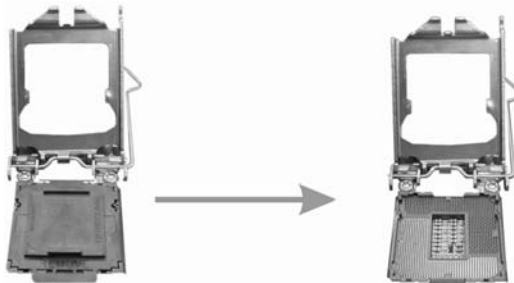

Motherboard Manual

Step 3: Look for the triangular cut edge on socket, and the golden dot on CPU should point forwards this triangular cut edge. The CPU will fit only in the correct orientation.

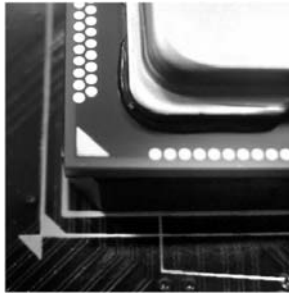

Step 4: Hold the CPU down firmly, and then lower the lever to locked position to complete the installation.




Step 5: Put the CPU Fan and heatsink assembly on the CPU and buckle it on the retention frame. Connect the CPU FAN power cable into the CPU_FAN1 to complete the installation.


2.2 FAN HEADERS

These fan headers support cooling-fans built in the computer. The fan cable and connector may be different according to the fan manufacturer. Connect the fan cable to the connector while matching the black wire to pin#1.

CPU_FAN1: CPU Fan Header

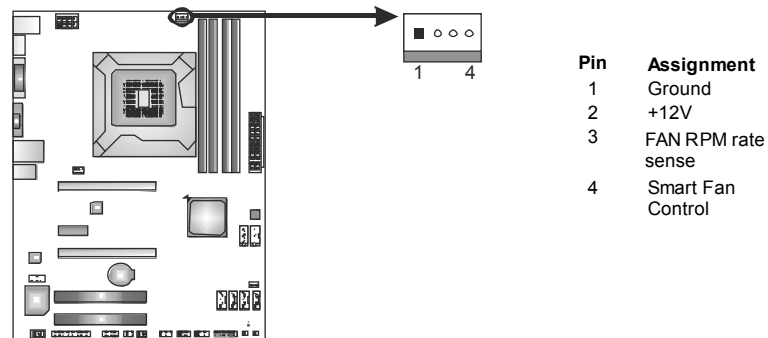

SYS_FAN1/SYS_FAN2: System Fan Headers

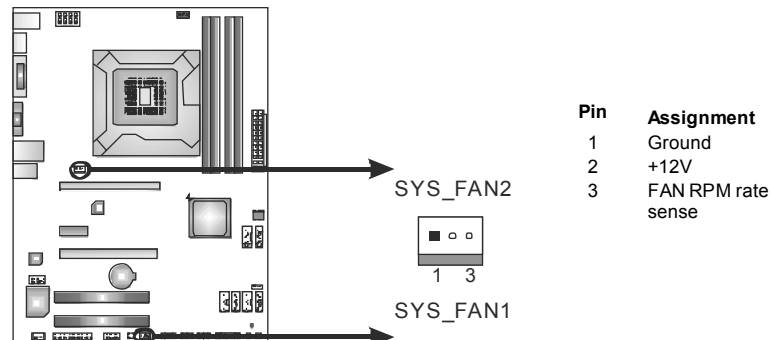


Note:


The SYS_FAN1/SYS_FAN2 support 3-pin head connectors; the CPU_FAN1 supports 4-pin head connector. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to GND.

2.3 INSTALLING SYSTEM MEMORY


A. Memory Modules

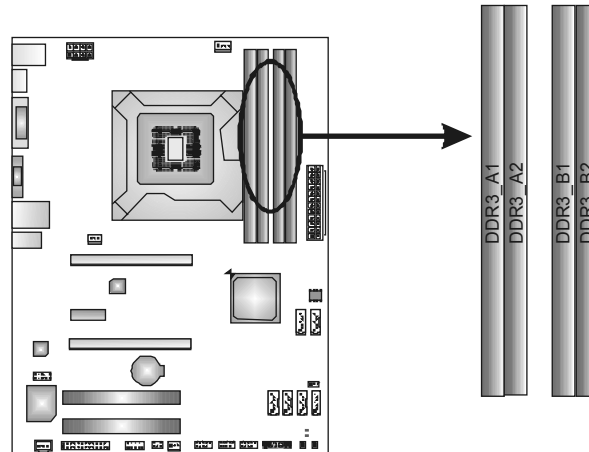

1. Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the Slot.

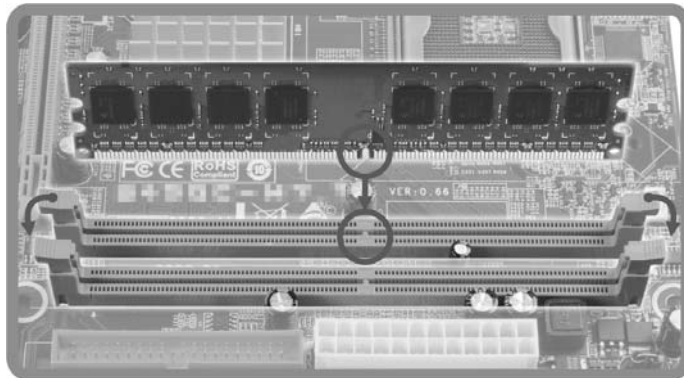

2. Insert the DIMM vertically and firmly into the slot until the retaining chip snap back in place and the DIMM is properly seated.

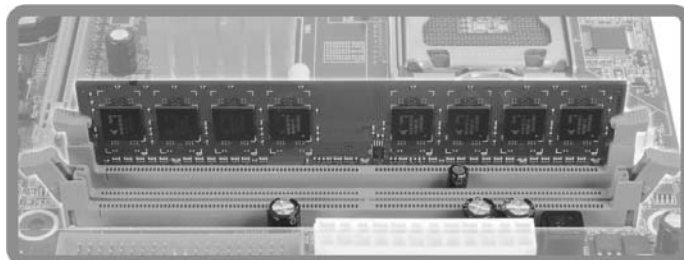

B. Memory Capacity

DIMM Socket Location	DDR3 Module	Total Memory Size
DDR3_A1	512MB/1GB/2GB/4GB/8GB	Max is 32GB.
DDR3_A2	512MB/1GB/2GB/4GB/8GB	
DDR3_B1	512MB/1GB/2GB/4GB/8GB	
DDR3_B2	512MB/1GB/2GB/4GB/8GB	

C. Dual Channel Memory Installation

Please refer to the following requirements to activate Dual Channel function:

Install memory module of the same density in pairs, shown in the table.

Dual Channel Status	DDR3_A1	DDR3_A2	DDR3_B1	DDR3_B2
Enabled	X	O	X	O
Enabled	O	O	O	O

(O means memory installed, X means memory not installed.)

The DRAM bus width of the memory module must be the same (x8 or x16)


Note:

Memory module must be installed in DDR3-A2 or DDR3-B2 to boot the system.

2.4 CONNECTORS AND SLOTS


SATA1/SATA2: Serial ATA3 Connectors

The motherboard has a PCI to SATA Controller with 2 channels SATA3 interface, it satisfies the SATA 3.0 spec and with transfer rate of 6.0Gb/s.

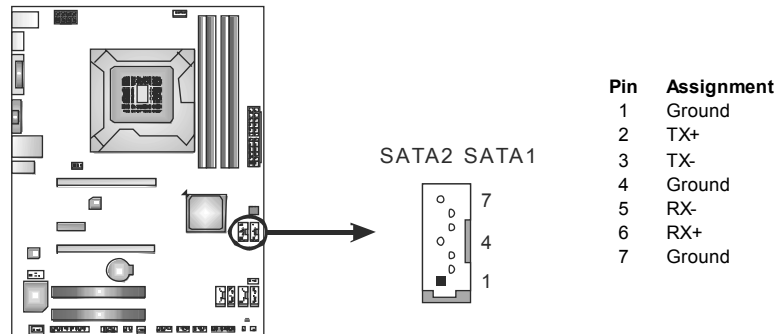


SATA3~SATA6: Serial ATA2 Connectors

The motherboard has a PCI to SATA Controller with 4 channels SATA2 interface, it satisfies the SATA 2.0 spec and with transfer rate of 3.0Gb/s.

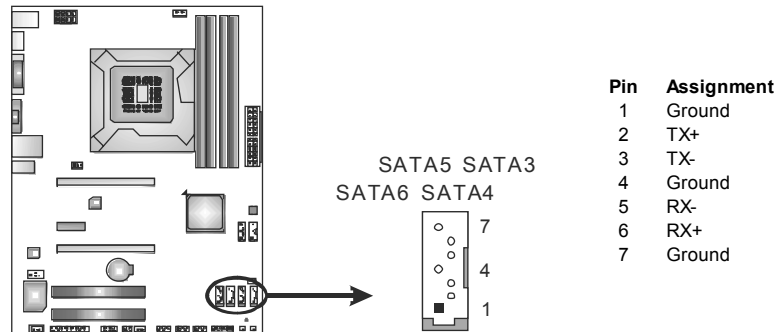

ATXPWR1: ATX Power Source Connector


This connector allows user to connect 24-pin power connector on the ATX power supply.

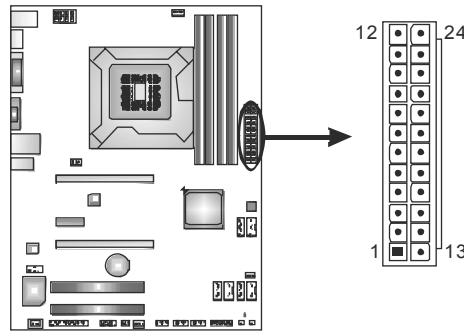

Pin	Assignment	Pin	Assignment
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	NC	8	PW_OK
21	+5V	9	Standby Voltage+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

ATXPWR2: ATX Power Source Connector

This connector provides +12V to CPU power circuit. If the CPU power plug is 4-pin, please plug it into Pin 1-2-5-6 of ATXPWR2.

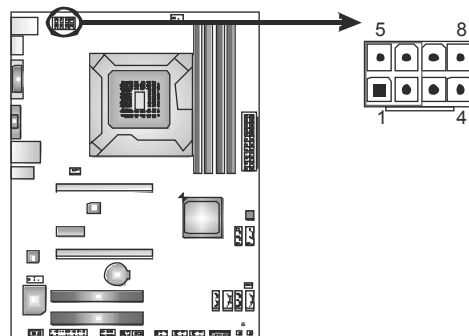

Pin	Assignment
1	+12V
2	+12V
3	+12V
4	+12V
5	Ground
6	Ground
7	Ground
8	Ground

Note:

Before you power on the system, please make sure that both ATXPWR1 and ATXPWR2 connectors have been well plugged-in.

PEX16_1: PCI-Express Gen2 x16 Slot


- PCI-Express 2.0 compliant.
- Maximum theoretical realized bandwidth of 8GB/s simultaneously per direction, for an aggregate of 16GB/s totally.
- PCI-Express Gen2 supports a raw bit-rate of 5.0Gb/s on the data pins.
- 2X bandwidth over the PCI-Express 1.1 architecture.

PEX16_2: PCI-Express Gen2 x4 Slot

- PCI-Express 2.0 compliant.
- Maximum theoretical realized bandwidth of 2GB/s simultaneously per direction, for an aggregate of 4GB/s totally.


PEX1_1: PCI-Express Gen2 x1 Slot

- PCI-Express 2.0 compliant.
- Data transfer bandwidth up to 500MB/s per direction; 1GB/s in total.
- PCI-Express supports a raw bit-rate of 2.5Gb/s on the data pins.

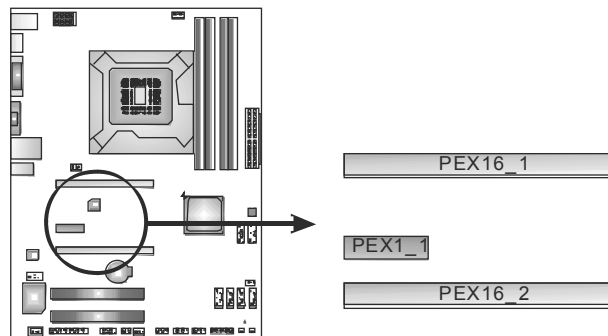

PCI1/PCI2: Peripheral Component Interconnect Slot

This motherboard is equipped with 2 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards. This PCI slot is designated as 32 bits.

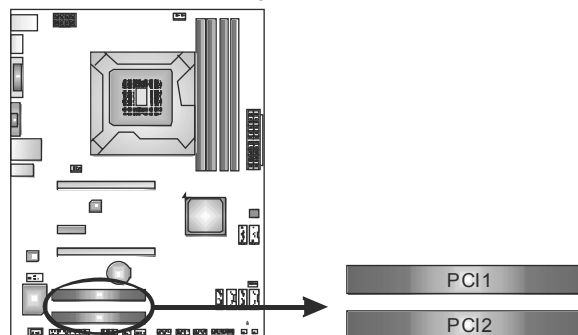

CHAPTER 3: HEADERS & JUMPERS SETUP

3.1 HOW TO SETUP JUMPERS


The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is “close”, if not, that means the jumper is “open”.



3.2 DETAIL SETTINGS

PANEL1: Front Panel Header


This 16-pin connector includes Power-on, Reset, HDD LED, Power LED, and speaker connection. It allows user to connect the PC case's front panel switch functions.

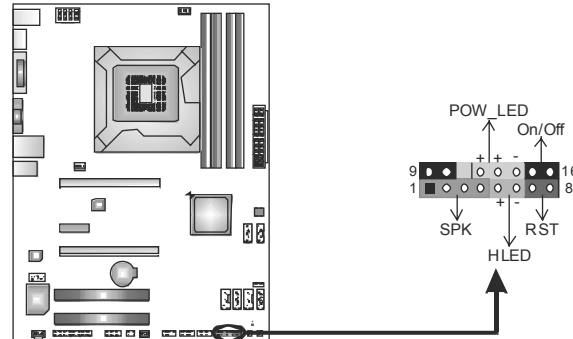

Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	9	N/A	N/A
2	N/A		10	N/A	
3	N/A		11	N/A	
4	Speaker	Hard drive LED	12	Power LED (+)	Power LED
5	HDD LED (+)		13	Power LED (+)	
6	HDD LED (-)	Reset button	14	Power LED (-)	
7	Ground		15	Power button	Power-on button
8	Reset control		16	Ground	

F_AUDIO1: Front Panel Audio Header


This header allows user to connect the front audio output cable with the PC front panel.

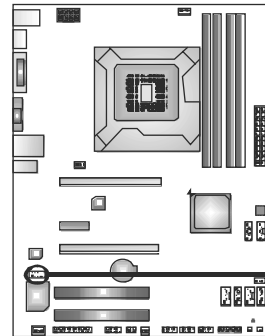

Pin	Assignment
1	Mic Left in
2	Ground
3	Mic Right in
4	GPIO
5	Right line in
6	Jack Sense
7	Front Sense
8	Key
9	Left line in
10	Jack Sense

JSPDIFOUT1: Digital Audio-out Connector


This connector allows user to connect the PCI bracket SPDIF output header.

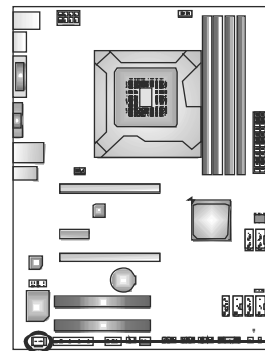

Pin	Assignment
1	+5V
2	SPDIF_OUT
3	Ground

CIR1: Consumer IR Connector


This header is for infrared remote control and communication.

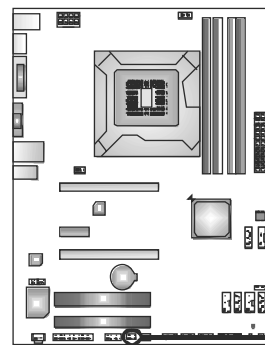

Pin	Assignment
1	IrDA serial input
2	Ground
3	Ground
4	Key
5	IrDA serial output
6	IR Power

JCMOS1: Clear CMOS Header

Placing the jumper on pin2-3 allows user to restore the BIOS safe setting and the CMOS data. Please carefully follow the procedures to avoid damaging the motherboard.

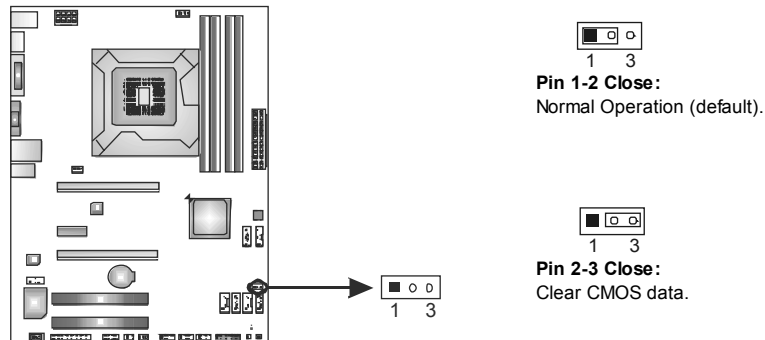


※ Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to "Pin 2-3 close".
3. Wait for five seconds.
4. Set the jumper to "Pin 1-2 close".
5. Power on the AC.
6. Load Optimal Defaults and save settings in CMOS.


F_USB1/F_USB2/F_USB3: Headers for USB 2.0 Ports at Front Panel

These headers allow user to connect additional USB cable on the PC front panel, and also can be connected with internal USB devices, like USB card reader.

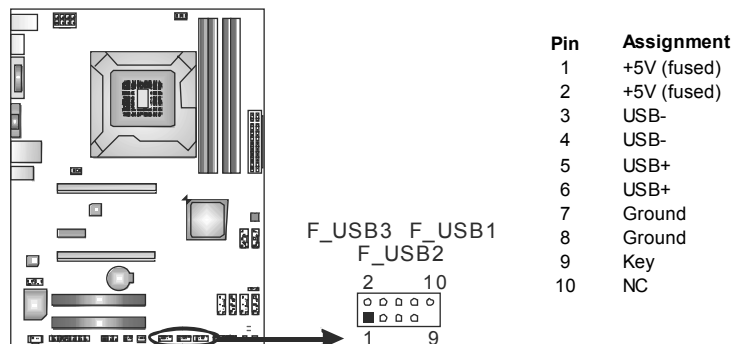

J_PRINT1: Printer Port Connector


This header allows you to connector printer on the PC.

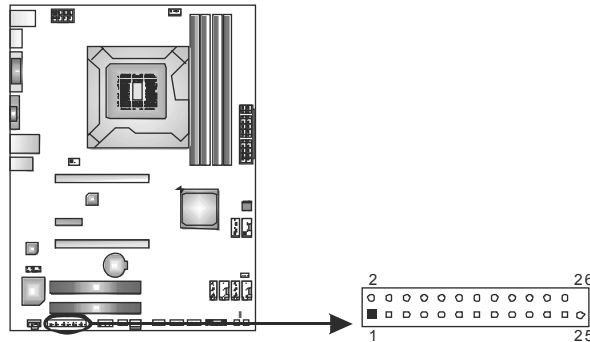

Pin	Assignment	Pin	Assignment
1	-Strobe	14	Ground
2	-ALF	15	Data 6
3	Data 0	16	Ground
4	-Error	17	Data 7
5	Data 1	18	Ground
6	-Init	19	-ACK
7	Data 2	20	Ground
8	-Scltin	21	Busy
9	Data 3	22	Ground
10	Ground	23	PE
11	Data 4	24	Ground
12	Ground	25	SCLT
13	Data 5	26	Key

J_COM1: Serial Port Connector


The motherboard has a Serial Port Connector for connecting RS-232 Port.

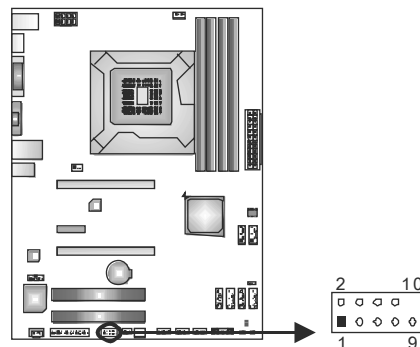

Pin	Assignment
1	Carrier detect
2	Received data
3	Transmitted data
4	Data terminal ready
5	Signal ground
6	Data set ready
7	Request to send
8	Clear to send
9	Ring indicator
10	NC

On-Board LED Indicators

There are 2 LED indicators on the motherboard showing system status.

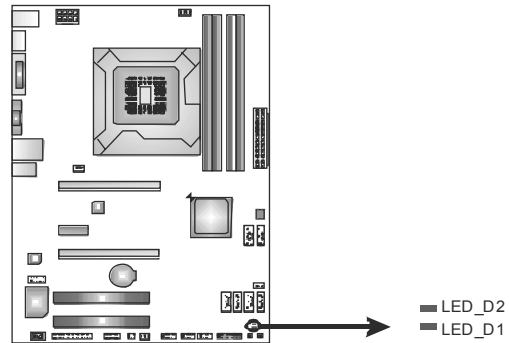


LED_D1 & LED_D2: Debug Indicators

Please refer to the tables below for specific messages:

LED_D1	LED_D2	Message
ON	ON	Normal
ON	OFF	Memory Error
OFF	ON	VGA Error
OFF	OFF	Abnormal: CPU / Chipset error.

On-Board Buttons

There are 2 on-board buttons.

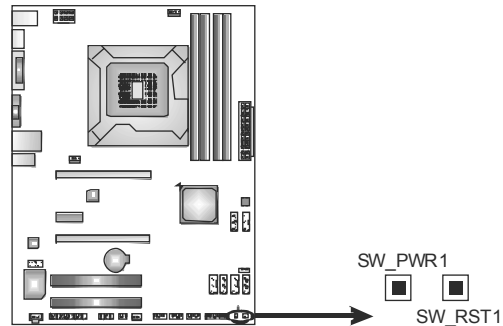

SW_RST1: Reset button.

SW_PWR1: Power Switch button.

CHAPTER 4: RAID FUNCTIONS

4.1 OPERATING SYSTEM

Supports Windows Vista and Windows 7.

4.2 RAID ARRAYS

RAID supports the following types of RAID arrays:

RAID 0: RAID 0 defines a disk striping scheme that improves disk read and write times for many applications.

RAID 1: RAID 1 defines techniques for mirroring data.

RAID 10: RAID 10 combines the techniques used in RAID 0 and RAID 1.

RAID 5: RAID 5 provides fault tolerance and better utilization of disk capacity.


4.3 How RAID WORKS

RAID 0:

The controller “stripes” data across multiple drives in a RAID 0 array system. It breaks up a large file into smaller blocks and performs disk reads and writes across multiple drives in parallel. The size of each block is determined by the stripe size parameter, which you set during the creation of the RAID set based on the system environment. This technique reduces overall disk access time and offers high bandwidth.

Features and Benefits

- **Drives:** Minimum 2, and maximum is up to 6 or 8. Depending on the platform.
- **Uses:** Intended for non-critical data requiring high data throughput, or any environment that does not require fault tolerance.
- **Benefits:** provides increased data throughput, especially for large files. No capacity loss penalty for parity.
- **Drawbacks:** Does not deliver any fault tolerance. If any drive in the array fails, all data is lost.
- **Fault Tolerance:** No.

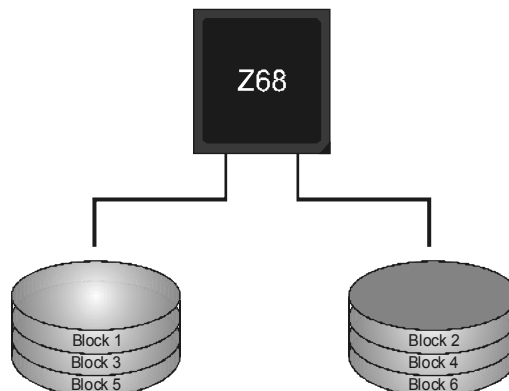


RAID 1:

Every read and write is actually carried out in parallel across 2 disk drives in a RAID 1 array system. The mirrored (backup) copy of the data can reside on the same disk or on a second redundant drive in the array. RAID 1 provides a hot-standby copy of data if the active volume or drive is corrupted or becomes unavailable because of a hardware failure. RAID techniques can be applied for high-availability solutions, or as a form of automatic backup that eliminates tedious manual backups to more expensive and less reliable media.

Features and Benefits

- **Drives:** Minimum 2, and maximum is 2.
- **Uses:** RAID 1 is ideal for small databases or any other application that requires fault tolerance and minimal capacity.
- **Benefits:** Provides 100% data redundancy. Should one drive fail, the controller switches to the other drive.
- **Drawbacks:** Requires 2 drives for the storage space of one drive. Performance is impaired during drive rebuilds.
- **Fault Tolerance:** Yes.

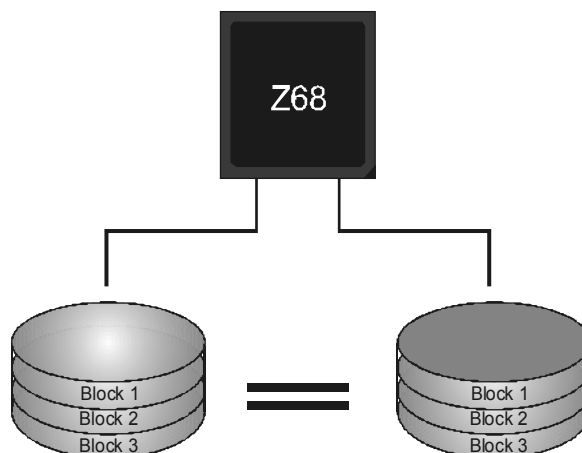


RAID 10:

RAID 1 drives can be striped using RAID 0 techniques. Resulting in a RAID 10 solution for improved resiliency, performance and rebuild performance.

Features and Benefits

- **Drives:** Minimum 4, and maximum is 6 or 8, depending on the platform.
- **Benefits:** Optimizes for both fault tolerance and performance, allowing for automatic redundancy. May be simultaneously used with other RAID levels in an array, and allows for spare disks.
- **Drawbacks:** Requires twice the available disk space for data redundancy, the same as RAID level 1.
- **Fault Tolerance:** Yes.

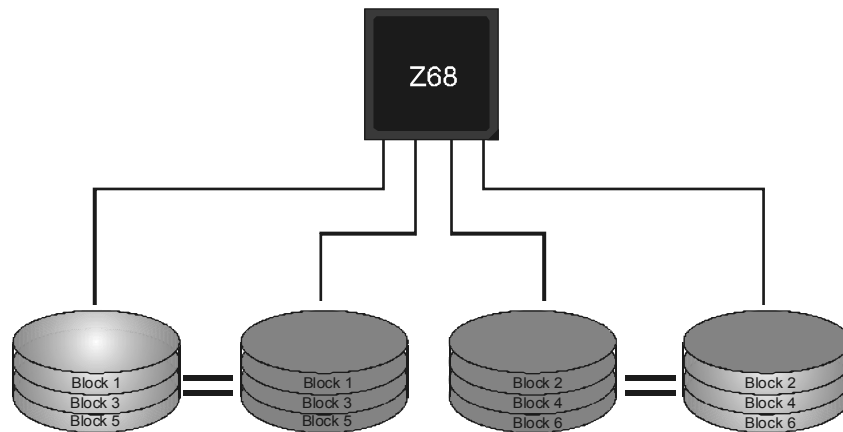


RAID 5:

RAID 5 stripes both data and parity information across three or more drives. It writes data and parity blocks across all the drives in the array. Fault tolerance is maintained by ensuring that the parity information for any given block of data is placed on a different drive from those used to store the data itself.

Features and Benefits

- **Drives:** Minimum 3.
- **Uses:** RAID 5 is recommended for transaction processing and general purpose service.
- **Benefits:** An ideal combination of good performance, good fault tolerance, and high capacity and storage efficiency.
- **Drawbacks:** Individual block data transfer rate same as a single disk. Write performance can be CPU intensive.
- **Fault Tolerance:** Yes.

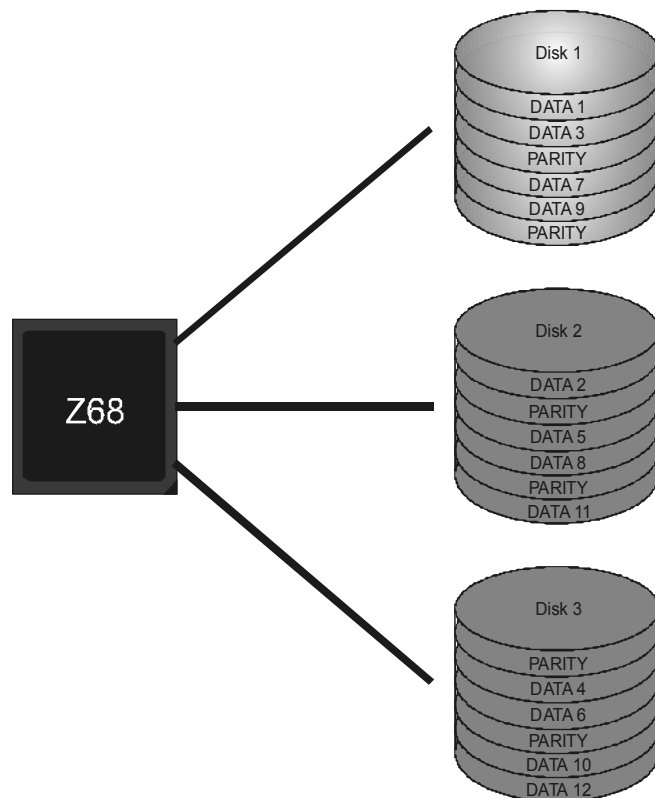

4.4 SMART STORAGE CACHING

With Intel(R) Rapid Storage Technology, the performance of RAID with an Intel SSD drive can be improved better.

Installing Smart Storage Caching

1. Install RAID drives (RAID 0, 1, 5) and an Intel SSD.
2. Activate RAID mode from BIOS, and install operating system.
3. Insert the Setup CD to the optical drive, and Install all drivers (including Intel(R) Rapid Storage Technology Driver). After all processes finish, reboot the system.
4. Intel(R) RST service icon will show in notification area. Double click it to open the main windows.
5. Select "Accelerate" page, and make sure the status of accelerated device has been enabled accelerated.

CHAPTER 5: T-SERIES BIOS & SOFTWARE

5.1 T-SERIES UEFI BIOS

T-Series UEFI BIOS Features


- Overclocking Navigator Engine (O.N.E.)
- Self Recovery System (S.R.S)
- Smart Fan Function
- BIO-Flasher: Update UEFI BIOS file from USB Flash Drive

!! WARNING !!

For better system performance, the UEFI BIOS firmware is being continuously updated. The UEFI BIOS information described below in this manual is for your reference only and the actual UEFI BIOS information and settings on board may be different from this manual. For further information of setting up the UEFI BIOS, please refer to the UEFI BIOS Manual in the Setup CD.

A. Overclocking Navigator Engine (O.N.E.)

O.N.E provides 4 systems allowing users to customize personal overclock settings: Manual CPU System, Manual Memory System, Manual PWM System, and Manual Voltage System.

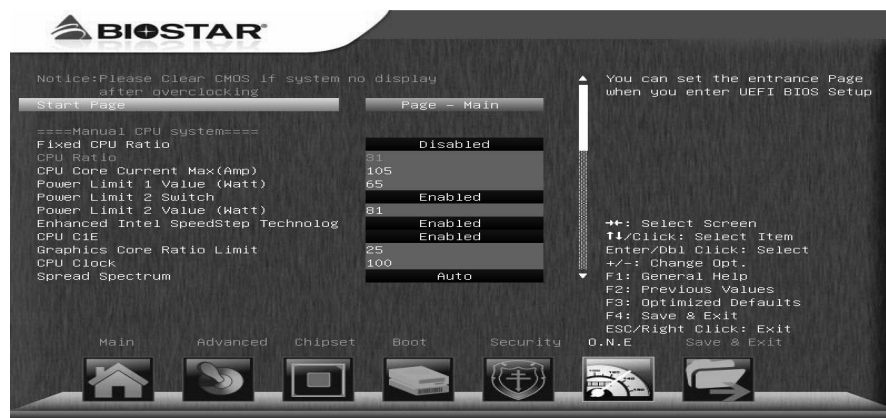

Notice:

Not all types of Intel CPU perform above overclock setting ideally; the difference will be based on the selected CPU model.

NOTE

Overclock is an optional process, but not a “must-do” process; it is not recommended for inexperienced users. Therefore, we will not be responsible for any hardware damage which may be caused by overclocking. We also would not guarantee any overclocking performance.

B. Self Recovery System (S.R.S.)

This function can't be seen under UEFI BIOS setup, and is always on whenever the system starts up.

However, it can prevent system hang-up due to inappropriate overclock actions.

When the system hangs up, S.R.S. will automatically log in the default UEFI BIOS setting, and all overclock settings will be re-configured.

C. Smart Fan Function

Smart Fan Function is under “Smart Fan Control” in “Advanced Menu”.

This is a brilliant feature to control CPU/System Temperature vs. Fan speed. When enabling Smart Fan function, Fan speed is controlled automatically by CPU/System temperature.

This function will protect CPU/System from overheat problem and maintain the system temperature at a safe level.





CPU Smart FAN

This item allows you to control the CPU Smart Fan function.

CPU FAN Calibrate

Press [ENTER] to calibrate CPU FAN.

Control Mode

This item provides several operation modes of the fan.

Fan Ctrl OFF(°C)

When CPU temperature is lower than this value, the CPU fan will keep lowest RPM. The range is from 0~127, with an interval of 1.

Fan Ctrl On(°C)

When CPU temperature is higher than this value, the CPU fan controller will turn on. The range is from 0~127, with an interval of 1.

Fan Ctrl Start Value

This item sets CPU FAN Start Speed Value. The range is from 0~127, with an interval of 1.

Fan Ctrl Sensitive

The bigger the numeral is, the higher the FAN speed is. The range is from 0~127, with an interval of 1.

5.2 T-SERIES SOFTWARE

Installing T-Series Software


1. Insert the Setup CD to the optical drive. The driver installation program would appear if the Auto-run function has been enabled.
2. Select **Software Installation**, and then click on the respective software title.
3. Follow the on-screen instructions to complete the installation.

Launching T-Series Software

After the installation process is completed, you will see the software icon showing on the desktop. Double-click the icon to launch it.

TOverclocker

TOverclocker presents a simple Windows-based system performance enhancement and manageability utility. It features several powerful and easy to use tools such as Overclocking for enhancing system performance, also for special enhancement on CPU and Memory. Smart-Fan management and PC health are for monitoring system status. This utility also allows you to make overclocking profiles saving unlimitedly, and pre-set OC modes are for easy OC. (The screenshots below are for reference only)

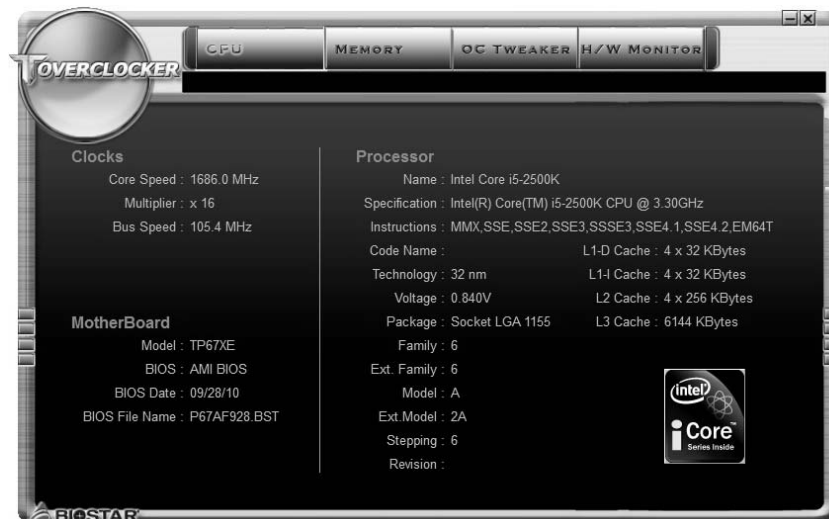



The **CPU** tab provides information on the CPU and motherboard.



The **Memory** tab provides information on the memory module(s).


You can select memory module on a specific slot to see its information.



The **OC Tweaker** tab allows you to change system clock settings and voltages settings. It also provides six pre-set modes for you:



3 Pre-set Modes: V6, V12, AUTO for different overclocking experience.

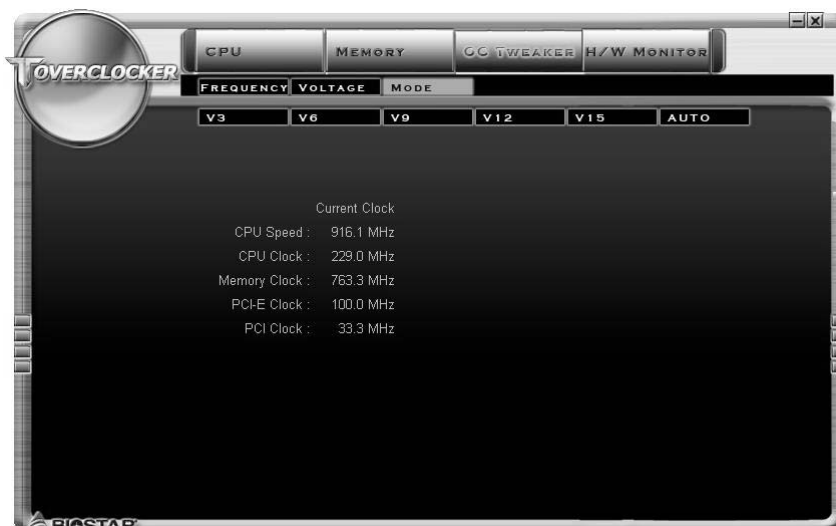


The **HW Monitor** tab allows you to monitor hardware voltage, fan speed, and temperature. Besides, you also can set related values for CPU Smart Fan.






Pressing **TOVERCLOCKER** logo displays information about manufacturer and software version. You can update current version by clicking the button “Live Update.”

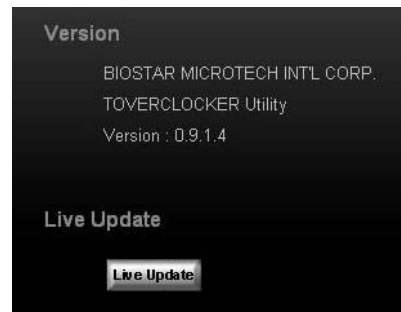

Green Power II Utility

BIOSTAR G.P.U II (Green Power Utility) is a new function. The utility enhances energy efficiency by disabling extra phases while CPU is on light loading; it features 4+1 power phases, current power saving, and total power saving. This tool integrates a friendly GUI to monitor your CPU Usage, CPU Watt, and CPU Temperature. Moreover, it optimizes power saving and best power efficiency on your system. (The illustration below is for reference only)

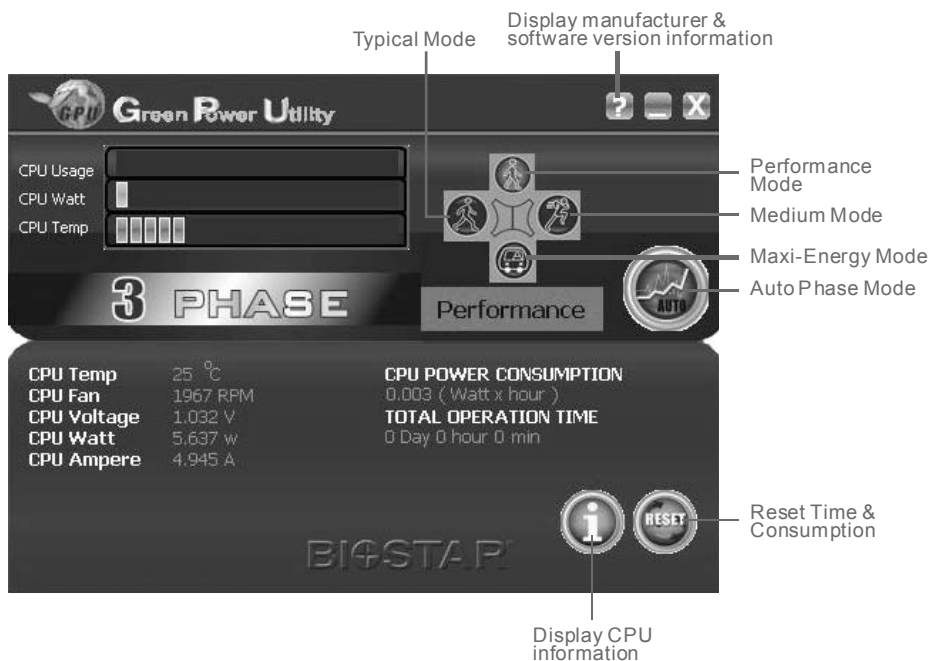

G.P.U Mode Setting

This utility provides five modes, upon your requirements, to improve system performance or to save power consumption.

Note: Even if the modes saving more power consumption are chosen, the system still can keep excellent performance.

- **Auto Phase Mode**

System switches the mode automatically according to current system loading condition.

- **Performance Mode**

This is the mode saving power consumption most. Least energy will be used in the system.

- **Typical Mode**

Compared with that in Performance Mode, energy consumption in this mode is a little bit more.

- **Medium Mode**

This is the standard system power saving mode.

- **Maxi-Energy Mode**

This is the best system performance mode.

Guide of Lucid VIRTU Installation

With Lucid VIRTU solution, the resource and performance of graphics can be integrated so that user can choose the suitable mode for the requirement.

System Requirements

■ Graphics cards:

- **Nvidia:** GF 4xx/5xx series
- **AMD:** HD5xxx/HD6xxx series


■ Display drivers:

- **Intel:** All WHQL drivers
- **Nvidia:** All WHQL drivers
- **AMD:** All WHQL drivers

■ Operating System: Windows 7 32-bit and 64-bit

BIOS Setting

1. Enter BIOS setup menu ([Chipset]->[North Bridge]), and set the two items as follows:
 - (1) **Initiate Graphic Adapter:** PEG/IGD
 - (2) **IGD Multi-Monitor:** Enabled

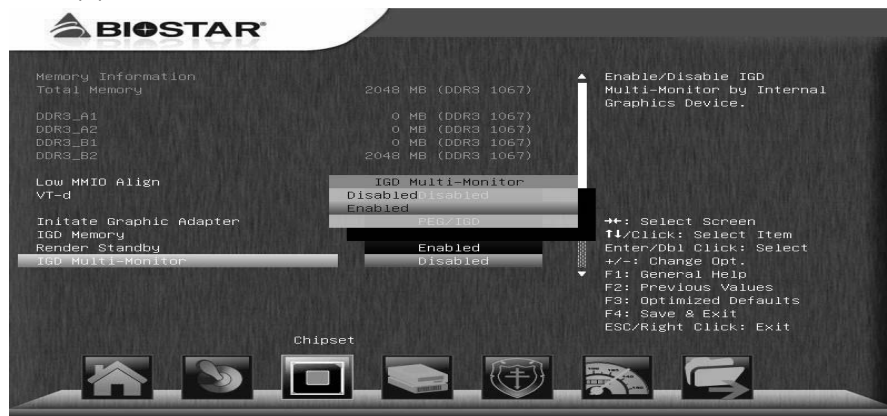

2. Press F4 to save the setting and exit.

Software Installation

1. Install VGA Driver and VIRTU Software.



2. After installation, please restart the computer. The screenshot below is control panel.



eHot-Line (Optional)

eHot-Line is a convenient utility that helps you to contact with our Tech-Support system. This utility will collect the system information which is useful for analyzing the problem you may have encountered, and then send these information to our tech-support department to help you fix the problem.



Before you use this utility, please set Outlook Express as your default e-mail client application program.

* represents important information that you must provide. Without this information, you may not be able to send out the mail.

This block will show the information which would be collected in the mail.

* Describe condition of your system.

Base board information :
 Caption : Base Board
 CreationClassName : Win32_Base
 Description : Base Board
 HostingBoard : TRUE
 HotSwappable : FALSE
 Manufacturer : BIOSTAR Group
 Name : Base Board
 PoweredOn : TRUE
 Product : TA780G M2+
 Removable : FALSE
 Replaceable : TRUE
 RequiresDaughterBoard : FALSE
 SerialNumber : None
 Status : OK
 Tag : Base Board
 Version : 6.0

Region :
 CC E-mail :
 Memory Module Manufacture :
 Power Supply Manufacture/model :

Send Save As... Exit

Send the mail out. Save these information to a .txt file Exit this dialog.

* Select your area or the area close to you.
 * Provide the e-mail address that you would like to send the copy to.
 * Provide the name of the memory module manufacturer.
 * Provide the name of the power supply manufacturer and the model no.

After filling up this information, click **“Send”** to send the mail out. A warning dialog would appear asking for your confirmation; click **“Send”** to confirm or **“Do Not Send”** to cancel.

Outlook Express

A program is attempting to send the following e-mail message on your behalf:

To: support@biostar-usa.com

Subject: TP35D2-A7 (P35BAC05 BS) report

Would you like to send the message?

Send Do Not Send


If you want to save this information to a .txt file, click **“Save As...”** and then you will see a saving dialog appears asking you to enter file name.

Enter the file name and then click “Save”. Your system information will be saved to a .txt file.



```
report - Help
File Edit View Help

=====
Base Board Information :
Caption : Base Board
ProductID : w103_BaseBoard
Description : Base Board
Manufacturer : STGStar Group
Name : Base Board
PowerOn : TRUE
Product : TP3102-A7
SerialNumber :
Tag : Base Board
Version :
=====
BIOS Information :
Caption : Phoenix - AwardBIOS v6.00PG
CurrentLanguage : enUS
InstallationLanguage :
Manufacturer : Phoenix Technology, LTD
Name : Phoenix - AwardBIOS v6.00PG
ReleaseDate : 2007/10/09 00:00:00
SerialNumber : 00000000000000000000
SMBIOSVersion : 6.00 PG
SMBIOSRevision : 3
SMBIOSPresent : TRUE
SoftwareElementState : 3
Status : OK
TargetOperatingSystem : 0
Version : 2007/10/09 - 43303433
```

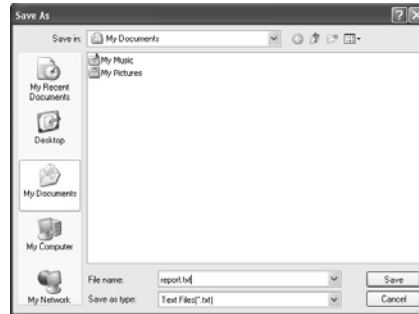

Open the saved .txt file, you will see your system information including motherboard/BIOS/CPU/video/device/OS information. This information is also concluded in the sent mail.




We will not share customer's data with any other third parties, so please feel free to provide your system information while using eHot-Line service.



If you are not using Outlook Express as your default e-mail client application, you may need to save the system information to a .txt file and send the file to our tech support with other e-mail application.


BIOS Update

BIOS Update is a convenient utility which allows you to update your motherboard BIOS under Windows system.

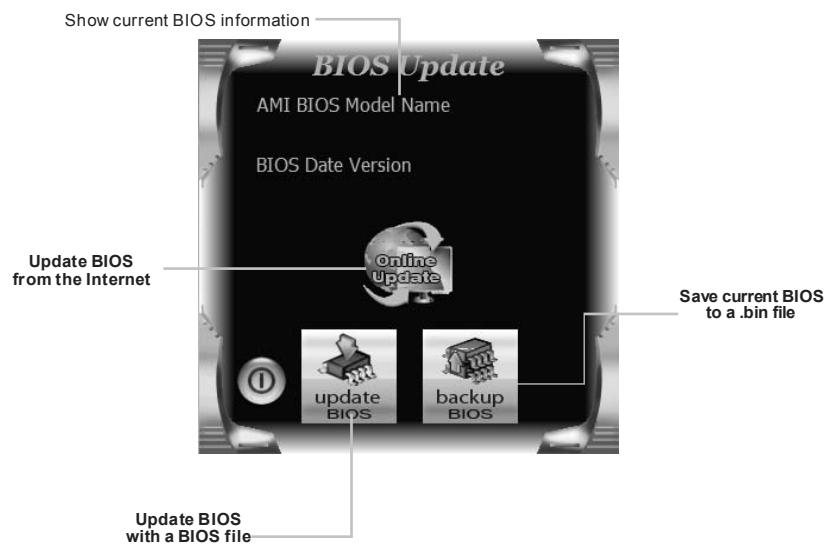


<Backup BIOS>

Once click on this button, the saving dialog will show. Choose the position to save file and enter file name. (We recommend that the file name should be English/number and no longer than 7 characters.) Then click **Save**.

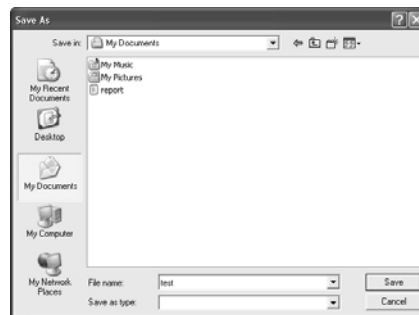



<Update BIOS>

Before doing this, please download the proper BIOS file from the website.

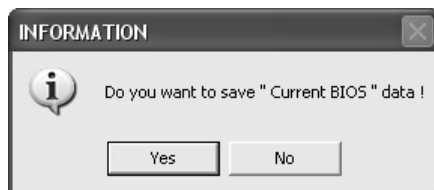


Click Update BIOS button, a dialog will show for asking you backup current BIOS. Click **Yes** for BIOS backup and refer to the Backup BIOS procedure; or click **No** to skip this procedure.


After the BIOS Backup procedure, the open dialog will show for requesting the BIOS file which is going to be updated. Please choose the proper BIOS file for updating, then click on **Open**.

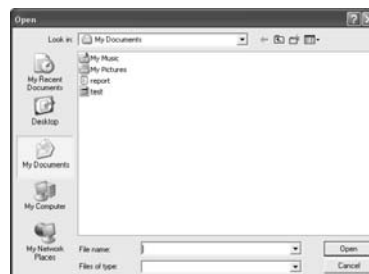

The utility will update BIOS with the proper BIOS file, and this process may take minutes. Please do not open any other applications during this process.

After the BIOS Update process, click on **OK** to restart the system.

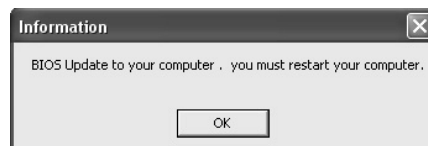

While the system boots up and the full screen logo shows, press  <Delete> key to enter BIOS setup.

In the BIOS setup, use the **Load Optimized Defaults** function and then **Save and Exit Setup** to exit BIOS setup. BIOS Update is completed.



All the information and content above about the T-Series software are subject to be changed without notice. For better performance, the software is being continuously updated. The information and pictures described above are for your reference only. The actual information and settings on board may be slightly different from this manual.

BIOScreen Utility (Optional)

This utility allows you to personalize your boot logo easily. You can choose JPG or BMP as your boot logo so as to customize your computer.



Please follow the following instructions to update boot logo:


1. **Load Image** : Choose the picture as the boot logo.
2. **Transform** : Transform the picture for BIOS and preview the result.
3. **Update Bios** : Write the picture to BIOS Memory to complete the update.

CHAPTER 6: USEFUL HELP

6.1 DRIVER INSTALLATION NOTE

After you installed your operating system, please insert the Fully Setup Driver CD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the CD

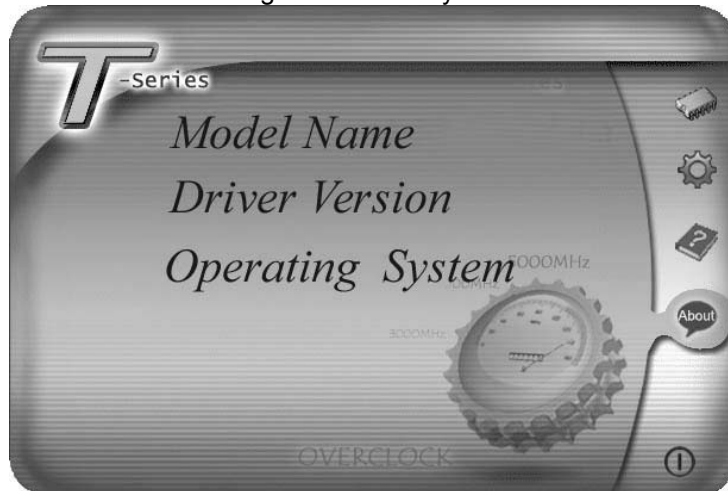

The setup guide will auto detect your motherboard and operating system.

Note:

If this window didn't show up after you insert the Driver CD, please use file browser to locate and execute the file **SETUP.EXE** under your optical drive.

A. Driver Installation

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

B. Software Installation

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

C. Manual

Aside from the paperback manual, we also provide manual in the Driver CD. Click on the Manual icon to browse for available manual.

Note:

You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from <http://www.adobe.com/products/acrobat/readstep2.html>

6.2 EXTRA INFORMATION

CPU Overheated

If the system shutdown automatically after power on system for seconds, that means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.

1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data.
(See "Close CMOS Header: JCMOS1" section)
2. Wait for seconds.
3. Power on the system again.

6.3 TROUBLESHOOTING

Probable	Solution
<ol style="list-style-type: none"> 1. There is no power in the system. Power LED does not shine; the fan of the power supply does not work 2. Indicator light on keyboard does not shine. 	<ol style="list-style-type: none"> 1. Make sure power cable is securely plugged in. 2. Replace cable. 3. Contact technical support.
System is inoperative. Keyboard lights are on, power indicator lights are lit, and hard drives are running.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from a hard disk drive, but can be booted from optical drive.	<ol style="list-style-type: none"> 1. Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup. 2. Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.
System only boots from an optical drive. Hard disks can be read, applications can be used, but system fails to boot from a hard disk.	<ol style="list-style-type: none"> 1. Back up data and applications files. 2. Reformat the hard drive. Re-install applications and data using backup disks.
Screen message shows "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
System cannot boot after user installs a second hard drive.	<ol style="list-style-type: none"> 1. Set master/slave jumpers correctly. 2. Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.

This page is intentionally left blank.

APPENDIX: SPEC IN OTHER LANGUAGES

GERMAN

Spezifikationen		
CPU	Socket 1155 Intel Core i7 / i5 / i3 / Pentium / Celeron Prozessoren	Unterstützt Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipsatz	Intel Z68	
Super E/A	IT8728 Bietet die häufig verwendeten alten Super E/A-Funktionen. Low Pin Count-Schnittstelle	Umgebungskontrolle, Hardware-Überwachung Lüfterdrehzahl-Controller/-Überwachung "Smart Guardian"-Funktion von ITE
Arbeitsspeicher	DDR3 DIMM-Steckplätze x 4 Max. 32GB Arbeitsspeicher Jeder DIMM unterstützt 512MB/ 1GB/2GB/4GB/8GB DDR3.	Dual-Kanal DDR3 Speichermodul Unterstützt DDR3 1066/1333/1600(OC) Unterstützt DDR3 1866(OC)/2133(OC)/2200(OC) registrierte DIMMs. ECC DIMMs werden nicht unterstützt.
SATA 2 & 3	Integrierter Serial ATA-Controller	Datentransferrate bis zu 3.0Gb/s / 6.0Gb/s. Konform mit der SATA-Spezifikation Version 2.0 / 3.0
LAN	Realtek RTL 8111E	10 / 100 / 1000 Mb/s Auto-Negotiation Halb-/ Vollduplex-Funktion
HD Audio-Unterstützung	ALC892	Unterstützt High-Definition Audio 5.1-Kanal-Audioausgabe
USB3.0	ASM1042	Datenübertragungsraten bis zu 600 MB / s
Steckplätze	PCI-Steckplatz x2 PCI-E Gen2 x 16 @ x16 Steckplatz x1 PCI-E Gen2 x 16 @ x4 Steckplatz x1 PCI-E Gen2 x1-Steckplatz x1	

Spezifikationen			
Onboard-Anschluss	SATA3-Anschluss	x2	Jeder Anschluss unterstützt 1 SATA3-Laufwerk
	SATA2-Anschluss	x4	Jeder Anschluss unterstützt 1 SATA2-Laufwerk
	Fronttafelanschluss	x1	Unterstützt die Fronttafel Funktionen
	Front-Audioanschluss	x1	Unterstützt die Fronttafel-Audioanschlussfunktion
	CPU-Lüfter-Sockel	x1	CPU-Lüfterstromversorgungsanschluss (mit Smart Fan-Funktion)
	System-Lüfter-Sockel	x2	System-Lüfter-Stromversorgungsanschluss
	"CMOS löschen"-Sockel	x1	
	USB2.0-Anschluss	x3	Jeder Anschluss unterstützt 2 Fronttafel-USB2.0-Anschlüsse
	Verbraucher-IR Anschluss	x1	
	Druckeranschluss	x1	Jeder Anschluss unterstützt 1 Druckeranschluss
	Serieller Anschluss	x1	
	S/PDIF Ausgangsanschluss	x1	Unterstützt die digitale Audioausgabefunktion
Rückseiten-E/A	Stromanschluss (24-polig)	x1	
	Stromanschluss (8-polig)	x1	
	PS/2-Tastatur / Maus	x1	
	HDMI-Anschluss	x1	
	VGA-Anschluss	x1	
	DVI-D-Anschluss	x1	
	LAN-Anschluss	x1	
	USB2.0-Anschluss	x2	
	USB3.0-Anschluss	x2	USB3.0 Geräte (durch ASM1042) USB2.0/USB1.X Geräte (durch Z68)
	Audioanschluss	x3	
Platinengröße	230 mm (B) X 305 mm (L)		
OS-Unterstützung	Windows XP / Vista / 7		Biostar behält sich das Recht vor, ohne Ankündigung die Unterstützung für ein Betriebssystem hinzuzufügen oder zu entfernen.

FRENCH

<i>SPEC</i>		
UC	Socket 1155 Processeurs Intel Core i7 / i5 / i3 / Pentium / Celeron	Prend en charge les technologies d'exécution de bit de désactivation / Intel SpeedStep® optimisée/ d'architecture Intel 64 / de mémoire étendue 64 / de virtualisation / Hyper Threading
Chipset	Intel Z68	
Super E/S	IT8728 Fournit la fonctionnalité de Super E/S patrimoniales la plus utilisée. Interface à faible compte de broches	Initiatives de contrôle environnementales, Moniteur de matériel Contrôleur /moniteur de vitesse de ventilateur Fonction "Gardien intelligent" de l'ITE
Mémoire principale	Fentes DDR3 DIMM x 4 Capacité mémoire maximale de 16 Go Chaque DIMM prend en charge des DDR3 de 512Mo/1Go/2Go/4Go	Module de mémoire DDR3 à mode à double voie Prend en charge la DDR3 1066/1333/1600(OC) Prend en charge la DDR3 1866(OC)/2133(OC)/2200(OC) Les DIMM à registres et DIMM avec code correcteurs d'erreurs ne sont pas prises en charge
SATA 2 & 3	Contrôleur Serial ATA intégré :	Taux de transfert jusqu'à 3.0Go/s / 6.0Go/s. Conforme à la spécification SATA Version 2.0 / 3.0
LAN	Realtek RTL 8111E	10 / 100 / 1000 Mb/s négociation automatique Half / Full duplex capability
Prise en charge audio HD	ALC892	Prise en charge de l'audio haute définition Sortie audio à 5.1 voies
USB3.0	ASM1042	Taux de transfert de données jusqu'à 600 Mo / s
Fentes	Fente PCI x2 Fente PCI-E Gen2 x 16 @ x16 Fente PCI-E Gen2 x 16 @ x4 Fente PCI-E Gen2 x1	x2 x1 x1 x1

SPEC			
Connecteur embarqué	Connecteur SATA3	x2	Chaque connecteur prend en charge 1 périphérique SATA3
	Connecteur SATA2	x4	Chaque connecteur prend en charge 1 périphérique SATA2
	Connecteur du panneau avant	x1	Prend en charge les équipements du panneau avant
	Connecteur Audio du panneau avant	x1	Prend en charge la fonction audio du panneau avant
	Embase de ventilateur UC	x1	Alimentation électrique du ventilateur UC (avec fonction de ventilateur intelligent)
	Embase de ventilateur système	x2	Alimentation électrique du ventilateur système
	Embase d'effacement CMOS	x1	
	Connecteur USB2.0	x3	Chaque connecteur prend en charge 2 ports USB2.0 de panneau avant
	Connecteur de IR du consommateur	x1	
	Connecteur de Port d'imprimante	x1	Chaque connector prend en charge 1 Port d'imprimante
	Port série	x1	
	Connecteur de sortie S/PDIF	x1	Prend en charge la fonction de sortie audio numérique
	Connecteur d'alimentation (24 broches)	x1	
	Connecteur d'alimentation (8 broches)	x1	
E/S du panneau arrière	Clavier / Souris PS/2	x1	
	Port HDMI	x1	
	Port VGA	x1	
	Port DVI-D	x1	
	Port LAN	x1	
	Port USB2.0	x2	
	Port USB3.0	x2	USB3.0 dispositifs (par ASM1042) USB2.0/USB1.X dispositifs (par Z68)
	Fiche audio	x3	
Dimensions de la carte	230 mm (l) X 305 mm (H)		
Support SE	Windows XP / Vista / 7		Biostar se réserve le droit d'ajouter ou de supprimer le support de SE avec ou sans préavis

ITALIAN

SPECIFICA		
CPU	Socket 1155 Processore Intel Core i7 / i5 / i3 / Pentium / Celeron	Supporto di Execute Disable Bit / Enhanced Intel SpeedStep® / Architettura Intel 64 / Tecnologia Extended Memory 64 / Tecnologia Virtualization / Hyper Threading
Chipset	Intel Z68	
Super I/O	IT8728 Fornisce le funzionalità legacy Super I/O usate più comunemente. Interfaccia LPC (Low Pin Count)	Funzioni di controllo dell'ambiente: Monitoraggio hardware Controller / Monitoraggio velocità ventolina Funzione "Smart Guardian" di ITE
Memoria principale	Alloggi DIMM DDR3 x 4 Capacità massima della memoria 32GB Ciascun DIMM supporta DDR3 512MB/1GB/2GB/4GB/8GB	Modulo di memoria DDR3 a canale doppio Supporto di DDR3 1066/1333/1600(OC) Supporto di DDR3 1866(OC)/2133(OC)/2200(OC) DIMM registrati e DIMM ECC non sono supportati
SATA 2 & 3	Controller Serial ATA integrato	Velocità di trasferimento dei dati fino a 3.0Gb/s / 6.0Gb/s. Compatibile specifiche SATA Versione 2.0/3.0
LAN	Realtek RTL 8111E	Negoziazione automatica 10 / 100 / 1000 Mb/s Capacità Half / Full Duplex
Supporto audio HD	ALC892	Supporto audio High-Definition (HD) Uscita audio 5.1 canali
USB3.0	ASM1042	Velocità di trasferimento dati fino a 600 MB / s
Alloggi	Alloggio PCI x2 Alloggio PCI-E Gen2 x16 @ x16 x1 Alloggio PCI-E Gen2 x16 @ x4 x1 Alloggio PCI Express Gen2 x1 x1	

SPECIFICA			
Connettori su scheda	Connettore SATA3	x2	Ciascun connettore supporta 1 unità SATA3
	Connettore SATA2	x4	Ciascun connettore supporta 1 unità SATA2
	Connettore pannello frontale	x1	Supporta i servizi del pannello frontale
	Connettore audio frontale	x1	Supporta la funzione audio pannello frontale
	Collettore ventolina CPU	x1	Alimentazione ventolina CPU (con funzione Smart Fan)
	Collettore ventolina sistema	x2	Alimentazione ventolina di sistema
	Collettore cancellazione CMOS	x1	
	Connettore USB2.0	x3	Ciascun connettore supporta 2 porte USB2.0 pannello frontale
	Connettore IR del consumatore	x1	
	Connettore Porta stampante	x1	Ciascun connettore supporta 1 Porta stampante
	Porta seriale	x1	
	Connettore output S/PDIF	x1	Supporta la funzione d'output audio digitale
I/O pannello posteriore	Connettore alimentazione (24 pin)	x1	
	Connettore alimentazione (8 pin)	x1	
	Tastiera / Mouse PS/2	x1	
	Porta HDMI	x1	
	Porta VGA	x1	
	Porta DVI-D	x1	
	Porta LAN	x1	
	Porta USB2.0	x2	
	Porta USB3.0	x2	USB3.0 dispositivi (da ASM1042) USB2.0/USB1.X dispositivi (da Z68)
	Connettore audio	x3	
Dimensioni scheda	230 mm (larghezza) x 305 mm (altezza)		
Sistemi operativi supportati	Windows XP / Vista / 7		Biostar si riserva il diritto di aggiungere o rimuovere il supporto di qualsiasi sistema operativo senza preavviso.

SPANISH

<i>Especificación</i>		
CPU	Socket 1155 Procesador Intel Core i7 / i5 / i3 / Pentium / Celeron	Admite Bit de deshabilitación de ejecución / Intel SpeedStep® Mejorado / Intel Architecture-64 / Tecnología Extended Memory 64 / Tecnología de virtualización / Hyper Threading
Conjunto de chips	Intel Z68	
Súper E/S	IT8728 Le ofrece las funcionalidades heredadas de uso más común Súper E/S. Interfaz de cuenta Low Pin	Iniciativas de control de entorno, Monitor hardware Controlador/monitor de velocidad de ventilador Función "Guardia inteligente" de ITE
Memoria principal	Ranuras DIMM DDR3 x 4 Capacidad máxima de memoria de 32GB Cada DIMM admite DDR de 512MB/1GB/2GB/4GB/8GB	Módulo de memoria DDR3 de canal Doble Admite DDR3 de 1066/1333/1600(OC) Admite DDR3 de 1866(OC)/2133(OC)/2200(OC) No admite DIMM registrados o DIMM compatibles con ECC
SATA 2 & 3	Controlador ATA Serie Integrado	Tasas de transferencia de hasta 3.0 Gb/s / 6.0 Gb/s. Compatible con la versión SATA 2.0 / 3.0.
Red Local	Realtek RTL 8111E	Negociación de 10 / 100 / 1000 Mb/s Funciones Half / Full dúplex
Soporte de sonido HD	ALC892	Soporte de sonido de Alta Definición Salida de sonido de 5.1 canales
USB3.0	ASM1042	Tasas de transferencia de datos hasta 600 MB / s
Ranuras	Ranura PCI X2 Ranura PCI-E Gen2 x16 @ x16 X1 Ranura PCI-E Gen2 x16 @ x4 X1 Ranura PCI-E Gen2 x 1 X1	

Especificación			
Conectores en placa	Conector SATA3	X2	Cada conector soporta 1 dispositivos SATA3
	Conector SATA2	X4	Cada conector soporta 1 dispositivos SATA2
	Conector de panel frontal	X1	Soporta instalaciones en el panel frontal
	Conector de sonido frontal	X1	Soporta funciones de sonido en el panel frontal
	Cabecera de ventilador de CPU	X1	Fuente de alimentación de ventilador de CPU (con función Smart Fan)
	Cabecera de ventilador de sistema	X2	Fuente de alimentación de ventilador de sistema
	Cabecera de borrado de CMOS	X1	
	Conector USB2.0	X3	Cada conector soporta 2 puertos USB2.0 frontales
	Conector de IR del consumidor	X1	
	Conector Puerto de impresora	X1	Cada conector soporta 1 Puerto de impresora
	Puerto serie	X1	
	Conector de salida S/PDIF	X1	Soporta función de salida de sonido digital
	Conector de alimentación (24 patillas)	X1	
	Conector de alimentación (8 patillas)	X1	
Panel trasero de E/S	Teclado / Ratón PS/2	X1	
	Ratón HDMI	X1	
	Puerto VGA	X1	
	Puerto DVI-D	X1	
	Puerto de red local	X1	
	Puerto USB2.0	X2	
	Puerto USB3.0	X2	USB3.0 dispositivos (por ASM1042) USB2.0/USB1.X dispositivos (por Z68)
	Conector de sonido	X3	
Tamaño de la placa	230 mm. (A) X 305 Mm. (H)		
Soporte de sistema operativo	Windows XP / Vista / 7		Biostar se reserva el derecho de añadir o retirar el soporte de cualquier SO con o sin aviso previo.

PORTUGUESE

ESPECIFICAÇÕES		
CPU	Socket 1155 Processador Intel Core i7 / i5 / i3 / Pentium / Celeron	Suporta as tecnologias Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture -64 / Extended Memory 64 / Virtualization / Hyper Threading
Chipset	Intel Z68	
Especificação Super I/O	IT8728 Proporciona as funcionalidades mais utilizadas em termos da especificação Super I/O. Interface LPC (Low Pin Count).	Iniciativas para controlo do ambiente Monitorização do hardware Controlador/Monitor da velocidade da ventoinha Função "Smart Guardian" da ITE
Memória principal	Ranuras DIMM DDR3 x 4 Capacidade máxima de memória: 16 GB Cada módulo DIMM suporta uma memória DDR3 de 512MB/ 1GB/2GB/4GB/8GB	Módulo de memória DDR3 de canal duplo Suporta módulos DDR3 1066/1333/1600(OC) Suporta módulos DDR3 1866(OC)/2133(OC)/2200(OC) Os módulos DIMM registados e os DIMM ECC não são suportados
SATA 2 & 3	Controlador Serial ATA integrado	Velocidades de transmissão de dados até 3.0 Gb/s / 6.0 Gb/s. Compatibilidade com a especificação SATA versão 2.0 / 3.0.
LAN	Realtek RTL 8111E	Auto negociação de 10 / 100 / 1000 Mb/s Capacidade semi/full-duplex
Suporte para áudio de alta definição	ALC892	Suporta a especificação High-Definition Audio Saída de áudio de 5.1 canais
USB3.0	ASM1042	Taxas de transferência de dados até 600 MB / s
Ranuras	Ranhura PCI x2 Ranhura PCI-E Gen2 x16 @ x16 x1 Ranhura PCI-E Gen2 x16 @ x4 x1 Ranhura PCI-E Gen2 x 1 x1	

ESPECIFICAÇÕES			
Conectores na placa	Conector SATA3	x2	Cada conector suporta 1 dispositivo SATA3
	Conector SATA2	x4	Cada conector suporta 1 dispositivo SATA2
	Conector do painel frontal	x1	Para suporte de várias funções no painel frontal
	Conector de áudio frontal	x1	Suporta a função de áudio no painel frontal
	Conector da ventoinha da CPU	x1	Alimentação da ventoinha da CPU (com a função Smart Fan)
	Conector da ventoinha do sistema	x2	Alimentação da ventoinha do sistema
	Conector para limpeza do CMOS	x1	
	Conector USB2.0	x3	Cada conector suporta 2 portas USB2.0 no painel frontal
	Conector de IR do consumidor	x1	
	Conector da para impressora	x1	Cada conector suporta 1 Porta para impressora
	Porta série	x1	
	Conector de saída S/PDIF	x1	Suporta a saída de áudio digital
	Conector de alimentação (24 pinos)	x1	
	Conector de alimentação (8 pinos)	x1	
Entradas/Saídas no painel traseiro	Teclado / Rato PS/2	x1	
	Porta HDMI	x1	
	Porta VGA	x1	
	Porta DVI-D	x1	
	Porta LAN	x1	
	Porta USB2.0	x2	
	Porta USB3.0	x2	USB3.0 dispositivos (por ASM1042) USB2.0/USB1.X dispositivos (por Z68)
	Tomada de áudio	x3	
Tamanho da placa	230 mm (L) X 305 mm (A)		
Sistemas operativos suportados	Windows XP / Vista / 7		A Biostar reserva-se o direito de adicionar ou remover suporte para qualquer sistema operativo com ou sem aviso prévio.

POLISH

<i>SPEC</i>		
Procesor	Socket 1155 Procesor Intel Core i7 / i5 / i3 / Pentium / Celeron	Obsługa Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipset	Intel Z68	
Pamięć główna	Gniazda DDR3 DIMM x 4 Maks. wielkość pamięci 32GB Każde gniazdo DIMM obsługuje moduły 512MB/1GB/2GB/4GB/8GB DDR3	Moduł pamięci DDR3 z trybem podwójnego kanału Obsługa DDR3 1066/1333/1600(OC) Obsługa DDR3 1866(OC)/2133(OC)/2200(OC) Brak obsługi Registered DIMM oraz ECC DIMM
Super I/O	IT8728 Zapewnia najbardziej powszechne funkcje Super I/O. Interfejs Low Pin Count	Funkcje kontroli warunków pracy, Monitor H/W Kontroler/Monitor prędkości wentylatora Funkcja ITE "Smart Guardian"
SATA 2 & 3	Zintegrowany kontroler Serial ATA	Transfer danych do 3.0 Gb/s / 6.0 Gb/s. Zgodność ze specyfikacją SATA w wersji 2.0 / 3.0.
LAN	Realtek RTL 8111E	10 / 100 / 1000 Mb/s z automatyczną negocjacją szybkości Działanie w trybie półowicznego / pełnego duplexu
Obsługa audio HD	ALC892	Obsługa High-Definition Audio 5.1 kanałowe wyjście audio
USB3.0	ASM1042	Cena transferu danych do 600 MB / s
Gniazda	Gniazdo PCI x2 Gniazdo PCI-E Gen2 x16 @ x16 x1 Gniazdo PCI-E Gen2 x16 @ x4 x1 Gniazdo PCI-E Gen2 x 1 x1	

SPEC			
Złącza wbudowane	Złącze SATA3	x2	Każde złącze obsługuje 1 urządzenie SATA3
	Złącze SATA2	x4	Każde złącze obsługuje 1 urządzenie SATA2
	Złącze panela przedniego	x1	Obsługa elementów panela przedniego
	Przednie złącze audio	x1	Obsługa funkcji audio na panelu przednim
	Złącze główkowe wentylatora procesora	x1	Zasilanie wentylatora procesora (z funkcją Smart Fan)
	Złącze główkowe wentylatora systemowego	x2	Zasilanie wentylatora systemowego
	Złącze główkowe kasowania CMOS	x1	
	Złącze USB2.0	x3	Każde złącze obsługuje 2 porty USB2.0 na panelu przednim
	Złącze Konsument IR	x1	
	Złącze Port drukarki	x1	Każde złącze obsługuje 1 Port drukarki
	Port szeregowy	x1	
	Złącze wyjścia S/PDIF	x1	Obsługa funkcji cyfrowego wyjścia audio
	Złącze zasilania (24 pinowe)	x1	
	Złącze zasilania (8 pinowe)	x1	
Back Panel I/O	Klawiatura / Mysz PS/2	x1	
	Port HDMI	x1	
	Port VGA	x1	
	Port DVI-D	x1	
	Port LAN	x1	
	Port USB2.0	x2	
	Port USB3.0	x2	USB3.0 urządzeń (przez ASM1042) USB2.0/USB1.X urządzeń (przez Z68)
	Gniazdo audio	x3	
Wymiary płyty	230 mm (S) X 305 mm (W)		
Obsługa systemu operacyjnego	Windows XP / Vista / 7		Biostar zastrzega sobie prawo dodawania lub odwoływania obsługi dowolnego systemu operacyjnego bez powiadomienia.

RUSSIAN

СПЕЦ		
CPU (центральный процессор)	Socket 1155 Процессор Intel Core i7 / i5 / i3 / Pentium / Celeron	Поддержка технологий Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / технологии виртуализация / Hyper Threading
Набор микросхем	Intel Z68	
Основная память	Слоты DDR3 DIMM x 4 Максимальная ёмкость памяти 16 ГБ Каждый модуль DIMM поддерживает 512МБ/1ГБ/2ГБ/4ГБ DDR3	Модуль памяти с двухканальным режимом DDR3 Поддержка DDR3 1066/1333/1600(OC) Поддержка DDR3 1866(OC)/2133(OC)/2200(OC) Не поддерживает зарегистрированные модули DIMM and ECC DIMM
Super I/O	IT8728 Обеспечивает наиболее используемые действующие функциональные возможности Super I/O. Интерфейс с низким количеством выводов	Инициативы по охране окружающей среды, Аппаратный монитор Регулятор скорости вентилятора/ монитор Функция ITE "Smart Guardian" (Интеллектуальная защита)
SATA 2 & 3	Встроенное последовательное устройство управления ATA	скорость передачи данных до 3.0 гигабит/с / 6.0 гигабит/с. Соответствие спецификации SATA версия 2.0/3.0
Локальная сеть	Realtek RTL 8111E	Автоматическое согласование 10 / 100 / 1000 Мб/с Частичная / полная дуплексная способность
Звуковая поддержка жесткого диска	ALC892	Звуковая поддержка High-Definition 5.1канальный звуковой выход
USB3.0	ASM1042	скорости передачи данных до 600 МБ / с
Слоты	Слот PCI x2 Слот PCI-E Gen2 x16 @ x16 x1 Слот PCI-E Gen2 x16 @ x4 x1 Слот PCI-E Gen2 x 1 x1	

СПЕЦ			
Встроенны й разъём	Разъём SATA3	x2	Каждый разъём поддерживает 1 устройство SATA3
	Разъём SATA2	x4	Каждый разъём поддерживает 1 устройство SATA2
	Разъём на лицевой панели	x1	Поддержка устройств на лицевой панели
	Входной звуковой разъём	x1	Поддержка звуковых функций на лицевой панели
	Контактирующее приспособление вентилятора центрального процессора	x1	Источник питания для вентилятора центрального процессора (с функцией интеллектуального вентилятора)
	Контактирующее приспособление вентилятора системы	x2	Источник питания для вентилятора системы
	Открытое контактирующее приспособление CMOS	x1	
	USB2.0-разъём	x3	Каждый разъём поддерживает 2 USB2.0-порта на лицевой панели
	Разъём едока ИКЫЙ	x1	
	Разъём Порт подключения принтера	x1	Каждый разъём поддерживает 1 Порт подключения принтера
	Последовательный порт	x1	
	Разъём вывода для S/PDIF	x1	Поддержка вывода цифровой звуковой функции
	Разъем питания (24 вывод)	x1	
	Разъем питания (8 вывод)	x1	
Задняя панель средств ввода-выв ода	Клавиатура / Мышь PS/2	x1	
	Порт HDMI	x1	
	Порт VGA	x1	
	Порт DVI-D	x1	
	Порт LAN	x1	
	USB2.0-порт	x2	
	USB3.0-порт	x2	USB3.0 устройств (по ASM1042) USB2.0/USB1.X устройств (по Z68)
	Гнездо для подключения наушников	x3	
Размер панели	230 мм (Ш) X 305 мм (В)		
Поддержка OS	Windows XP / Vista / 7		Biostar сохраняет за собой право добавлять или удалять средства обеспечения для OS с или без предварительного уведомления.

ARABIC

المواصفات		
Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading	Socket 1155 Intel Core i7 / i5 / i3 / Pentium / Celeron يتردد يصل إلى	وحدة المعالجة المركزية
	Intel Z68	مجموعة الشرائح
عدد4 قناة DDR3 DIMM سعة ذاكرة قصوى 16 جيجا بايت ميجا بايت و 1/ 512/ سعة DDR3 تدعم ذاكرة من نوع DIMM تدعم كل قناة و2/ 4 جيجا بايت	مزدوجة لقناة DDR3 وحدة ذاكرة سعة 1600/1333/1066 (OC) DDR3 تدعم الذاكرة من نوع ميجا بايت سعة 1866 (OC) 2133 (OC) 2200 (OC) ميجا بايت ECC وتلك التي لا تتوافق مع DIMM لا تدعم رقائق الذاكرة	الذاكرة الرئيسية
وسائل التحكم في البيئة: مراقب لمعرفة حالة الأجهزة مراقب في سرعة المروحة ITE من "Smart Guardian" وظيفة	IT8728 Super I/O الأكثر استخداماً. Super I/O توفر وظيفة Low Pin Count Interface تدعم تقنية	Super I/O
6.0 / ثنائية/جيجابت 3.0 إلى تصل بسرعات البيانات نقل ثنائية/جيجابت 3.0 / 2.0 الإصدار SATA مطلقة لمواصفات	Serial ATA متحكم	SATA 2 & 3
تفاوض تلقائي 100/10 ميجا بايت / ثنائية و1 جيجا بت/ثنائية إمكانية النقل المزدوج الكامل/القصفي	Realtek RTL 8111E	شبكة داخلية
تدعم تقنية الصوت عالي التعريف من 5.1 قنوات لخرج الصوت	ALC892	دعم الصوت عالي التعريف
ثنائية / بايت ميغا 600 إلى تصل ببيانات نقل معدلات	ASM1042	USB3.0
	قناة PCI قناة PCI-E Gen2 x16 @ x16 قناة PCI-E Gen2 x16 @ x4 قناة PCI-E Gen2 x1	القنوات

المواصفات		
منفذ SATA3	عدد 2	يدعم كل منفذ واحد من أجهزة SATA3
منفذ SATA2	عدد 4	يدعم كل منفذ واحد من أجهزة SATA2
منفذ اللوحة الأممية	عدد 1	يدعم تجهيزات اللوحة الأممية
منفذ الصوت الأممي	عدد 1	يدعم وظيفة الصوت باللوحة الأممية
وصلة مروحة وحدة المعالجة المركزية	عدد 1	لتوصيل الطاقة لمروحة وحدة المعالجة مع وظيفة Smart Fan
وصلة مروحة النظام	عدد 2	لتوصيل الطاقة لمروحة النظام
المنفذ على سطح اللوحة	عدد 1	وصلة مسح CMOS
منفذ USB2.0	عدد 3	يدعم كل منفذ قحني USB2.0 باللوحة الأممية
منفذ الأحمر تحت مستهلكة	عدد 1	
منفذ طابعة	عدد 1	
منفذ تسلسلي	عدد 1	
منفذ خرج S/PDIF	عدد 1	يدعم وظيفة خرج الصوت الرقمي
منفذ توصيل الطاقة (24دبوس)	عدد 1	
منفذ توصيل الطاقة (8دبابيس)	عدد 1	
لوحة مفاتيح / ملوس PS/2	عدد 1	
منافذ HDMI	عدد 1	
منافذ VGA	عدد 1	
منافذ DVI-D	عدد 1	
منفذ دخل/خرج اللوحة الخلفية	عدد 1	منفذ شبكة اتصال محلية
منافذ USB2.0	عدد 2	
منافذ USB3.0	عدد 2	USB3.0 لأجهزة (قبل من ASM1042)
		USB2.0/USB1.X لأجهزة (قبل من Z68)
مقيس صوت	عدد 3	
حجم اللوحة	230 مم (عرض) X 305 مم (ارتفاع)	
دعم أنظمة التشغيل	Windows XP / Vista / 7	
	بحقها في إضافة أو إزالة الدعم لأي نظام تشغيل بإخطار أو Biostar احتفظ بنون إخطار.	

JAPANESE

仕様		
CPU	Socket 1155 Intel Core i7 / i5 / i3 / Pentium / Celeron プロセッサ	Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threadingをサポートします
チップセット	Intel Z68	
メインメモリ	DDR3 DIMMスロット x 4 最大メモリ容量32GB 各DIMMは 512MB/1GB/2GB/4GB/8GB DDR3をサポート	デュアル チャンネルモードDDR3メモリモジュール DDR3 1066/1333/1600(OC) をサポート DDR3 1866(OC)/2133(OC)/2200(OC) をサポート 登録済みDIMMとECC DIMMはサポートされません
Super I/O	IT8728 もっとも一般に使用されるレガシーSuper I/O機能を採用しています。 低ピンカウントインターフェイス	環境コントロールイニシアチブ、 H/Wモニター ファン速度コントローラ/ モニター ITEの「スマートガーディアン」機能
SATA 2 & 3	統合シリアルATAコントローラ	最高3.0 Gb/秒 / 6.0 Gb/秒のデータ転送速度 SATAバージョン2.0 / 3.0仕様に準拠。
LAN	Realtek RTL 8111E	10 / 100 / 1000 Mb/秒のオートネゴシエーション 半/全二重機能
HDオーディオのサポート	ALC892 ハイデフィニションオーディオのサポート 5.1 チャンネルオーディオアウト	
USB3.0	ASM1042	データ転送速度最大600 MB / 秒の
スロット	PCIスロット x2 PCI-E Gen2 x16 @ x16スロット x1 PCI-E Gen2 x16 @ x4スロット x1 PCI Express Gen2 x 1スロット x1	

仕様			
オンボードコネクタ	SATA3コネクタ	x2	各コネクタは1つのSATA3デバイスをサポートします
	SATA2コネクタ	x4	各コネクタは1つのSATA2デバイスをサポートします
	フロントパネルコネクタ	x1	フロントパネル機能をサポートします
	フロントオーディオコネクタ	x1	フロントパネルオーディオ機能をサポートします
	CPUファンヘッダ	x1	CPUファン電源装置(スマートファン機能を搭載)
	システムファンヘッダ	x2	システムファン電源装置
	CMOSクリアヘッダ	x1	
	USB2.0コネクタ	x3	各コネクタは2つのフロントパネルUSB2.0ポートをサポートします
	消費者IRコネクタ	x1	
	プリンタポートコネクタ	x1	各コネクタは1つのプリンタポートをサポートします
	シリアルポート	x1	
	S/PDIFアウトコネクタ	x1	デジタルオーディオアウト機能をサポートします
	電源コネクタ(24ピン)	x1	
	電源コネクタ(8ピン)	x1	
背面パネルI/O	PS/2キーボード / マウス	x1	
	HDMIポート	x1	
	VGAポート	x1	
	DVI-Dポート	x1	
	LANポート	x1	
	USB2.0ポート	x2	
	USB3.0ポート	x2	USB3.0デバイス (で ASM1042) USB2.0/USB1.Xデバイス (で Z68)
	オーディオジャック	x3	
ボードサイズ	230 mm (幅) X 305 mm (高さ)		
OSサポート	Windows XP / Vista / 7		Biostarは事前のサポートなしにOSサポートを追加または削除する権利を留保します。

2011/07/19